 


SPECIFICATION


DWG

PRODUCT NO

ML012



 Modus Sconce

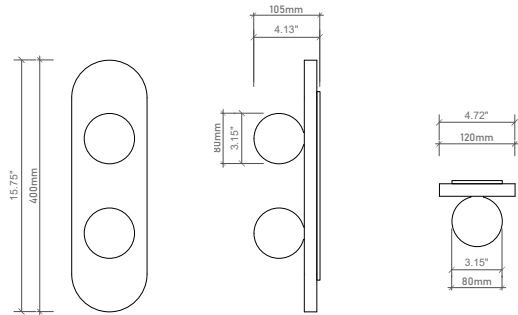

Type:	Sconce
Globe type:	2 G9 LED
Voltage:	110V-220V compatible
Wattage:	5W
Environment:	Indoor
Installation:	Hard Wired Wall Sconce

Luxurious Handcrafted Alabaster Wall Sconce
IINK Studio presents a masterpiece of modern elegance—meticulously crafted from Alabaster, renowned for its dramatic violet veining and natural grandeur. This statement piece blends artisanal craftsmanship with mid-century modern flair, casting a warm, ambient glow that transforms walls into works of art. Available in three different sizes

 
Material: A striking slab of natural Alabaster, showcasing bold, organic veins and a polished finish. Each slab is hand-selected for its unique character. Versatility: Perfect for hallways, living rooms, or bedrooms—ideal for ambient lighting or highlighting decor.

Installation & Care:

Weight-Bearing: Due to the marble's natural heft, ensure walls are reinforced or sturdy (e.g., concrete, solid wood).

INSTALLATION


STEP 1

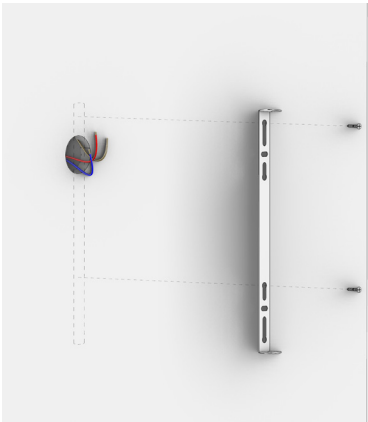

Locate & Mark

- Hold the hanging base against the wall at the desired height.
- Use a level to ensure it's straight, then mark screw hole positions.
- Verify no electrical wires/pipes are behind marked spots

 
STEP 2

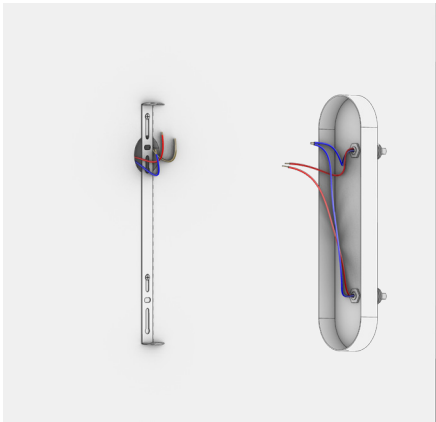

Drill & Secure

- Drill holes at marked points using a masonry bit (for concrete/brick) or wood bit (for studs).
- Insert wall plugs (expansion anchors) if needed.
- Align the hanging base with holes and fasten using screws. Ensure it's firmly attached

 
STEP 3

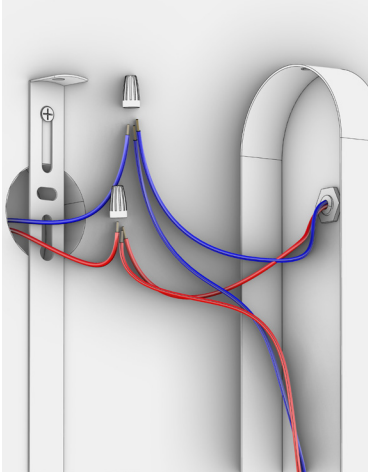

Connect Wires

- Important: Confirm power is OFF
- Feed home wiring through the base's center opening.
- Secure with wire nuts or terminal blocks. Wrap connections with electrical tape.
- Tuck wires neatly into the electrical box.

 STEP 4

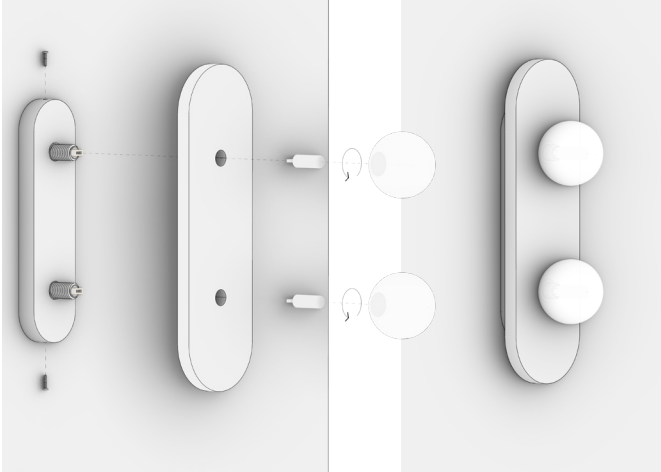

Align the lamp body with the mounted base.

Restore Power & Inspect

- Turn power back on at the breaker.
- Test the light. Check for flickering, unusual sounds, or heat.
- If issues occur, immediately turn off power and recheck connections.